



Steps:

- 1) Insert floor pins at bottom interior of side panels.
Note: Floor pins are designed to be slightly angled.
- 2) Attach side panels to front & back panels, using screw caps.
- 3) Slide floor into the bottom of assembled counter base.
The floor will sit on pins in the side panels.
- 4) Attach Velcro on Shelf Supports to fabric of side panels, then set shelf on top of supports.
- 5) Set counter top on assembled counter base, then secure with pins. See Counter Top Attachment detail.

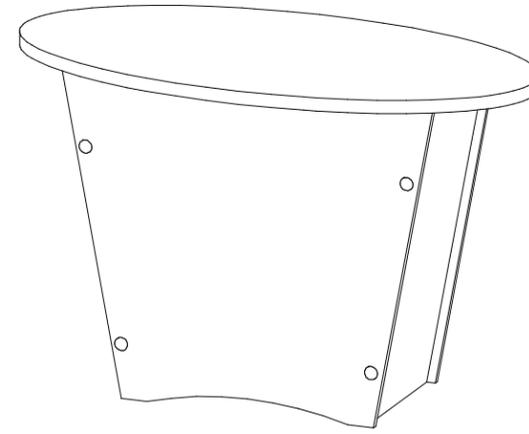


Front View

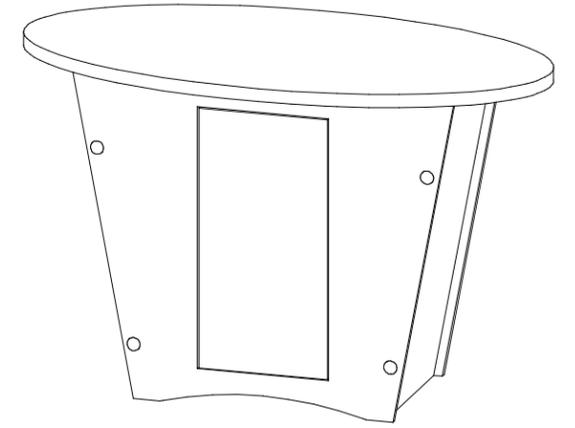


Back View

Remove floor pins for floor from side panels when packing.

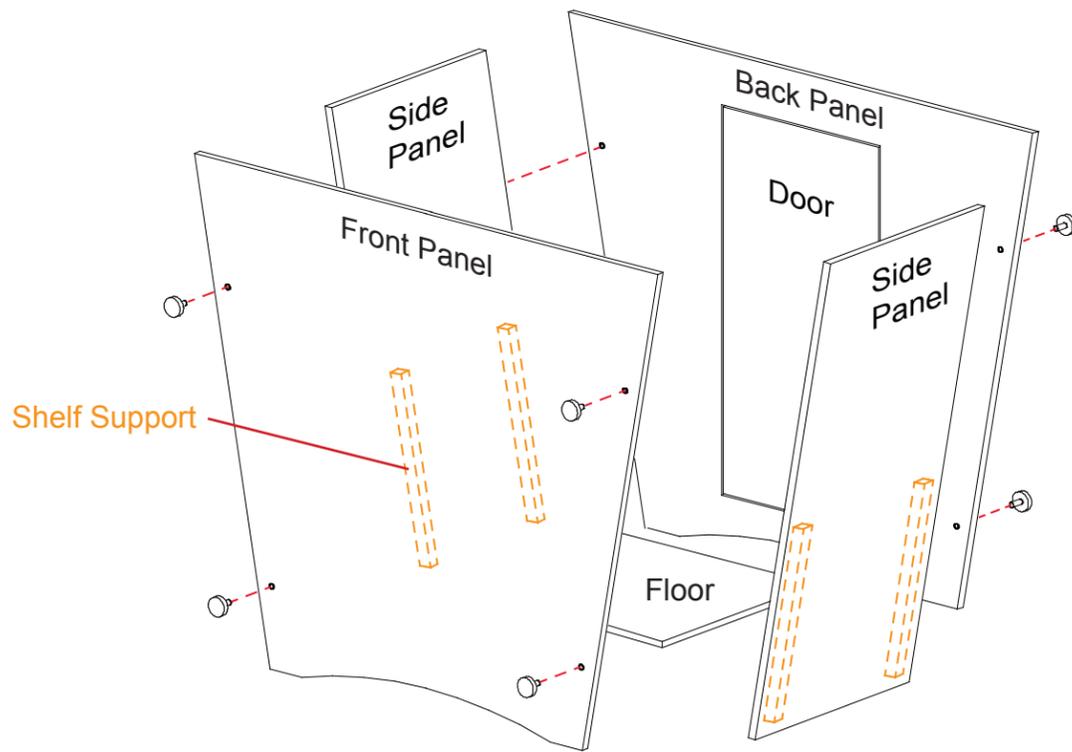

Counter Base Assembly

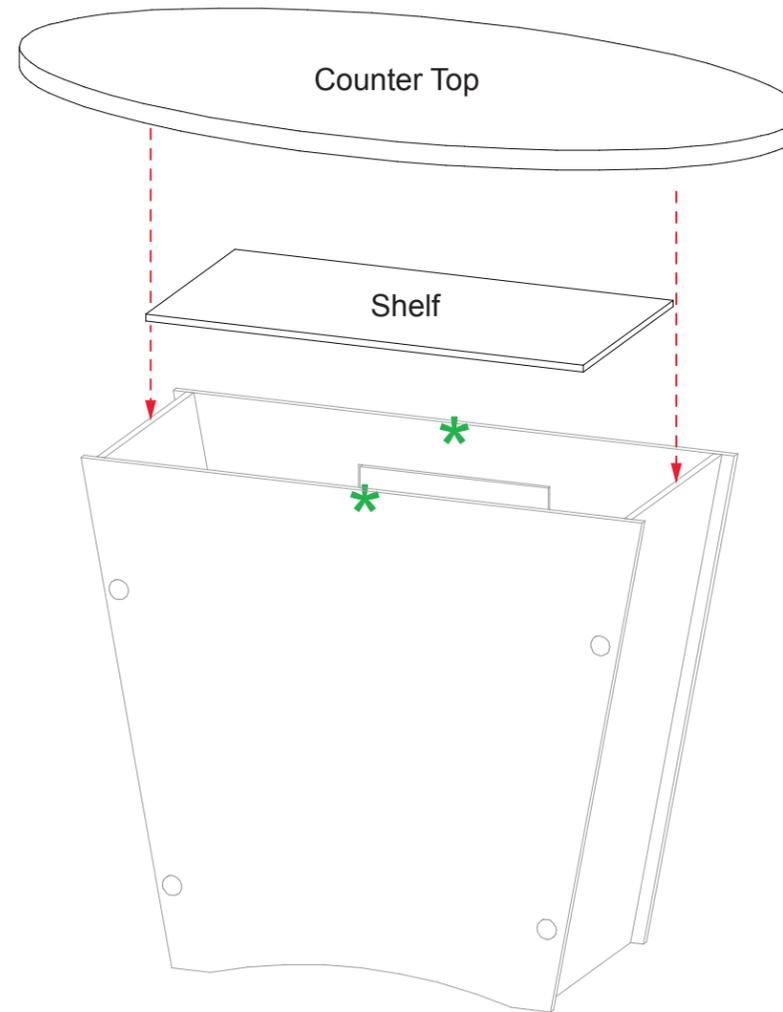

Counter Top & Shelf Attachments

