


Plan View 10'

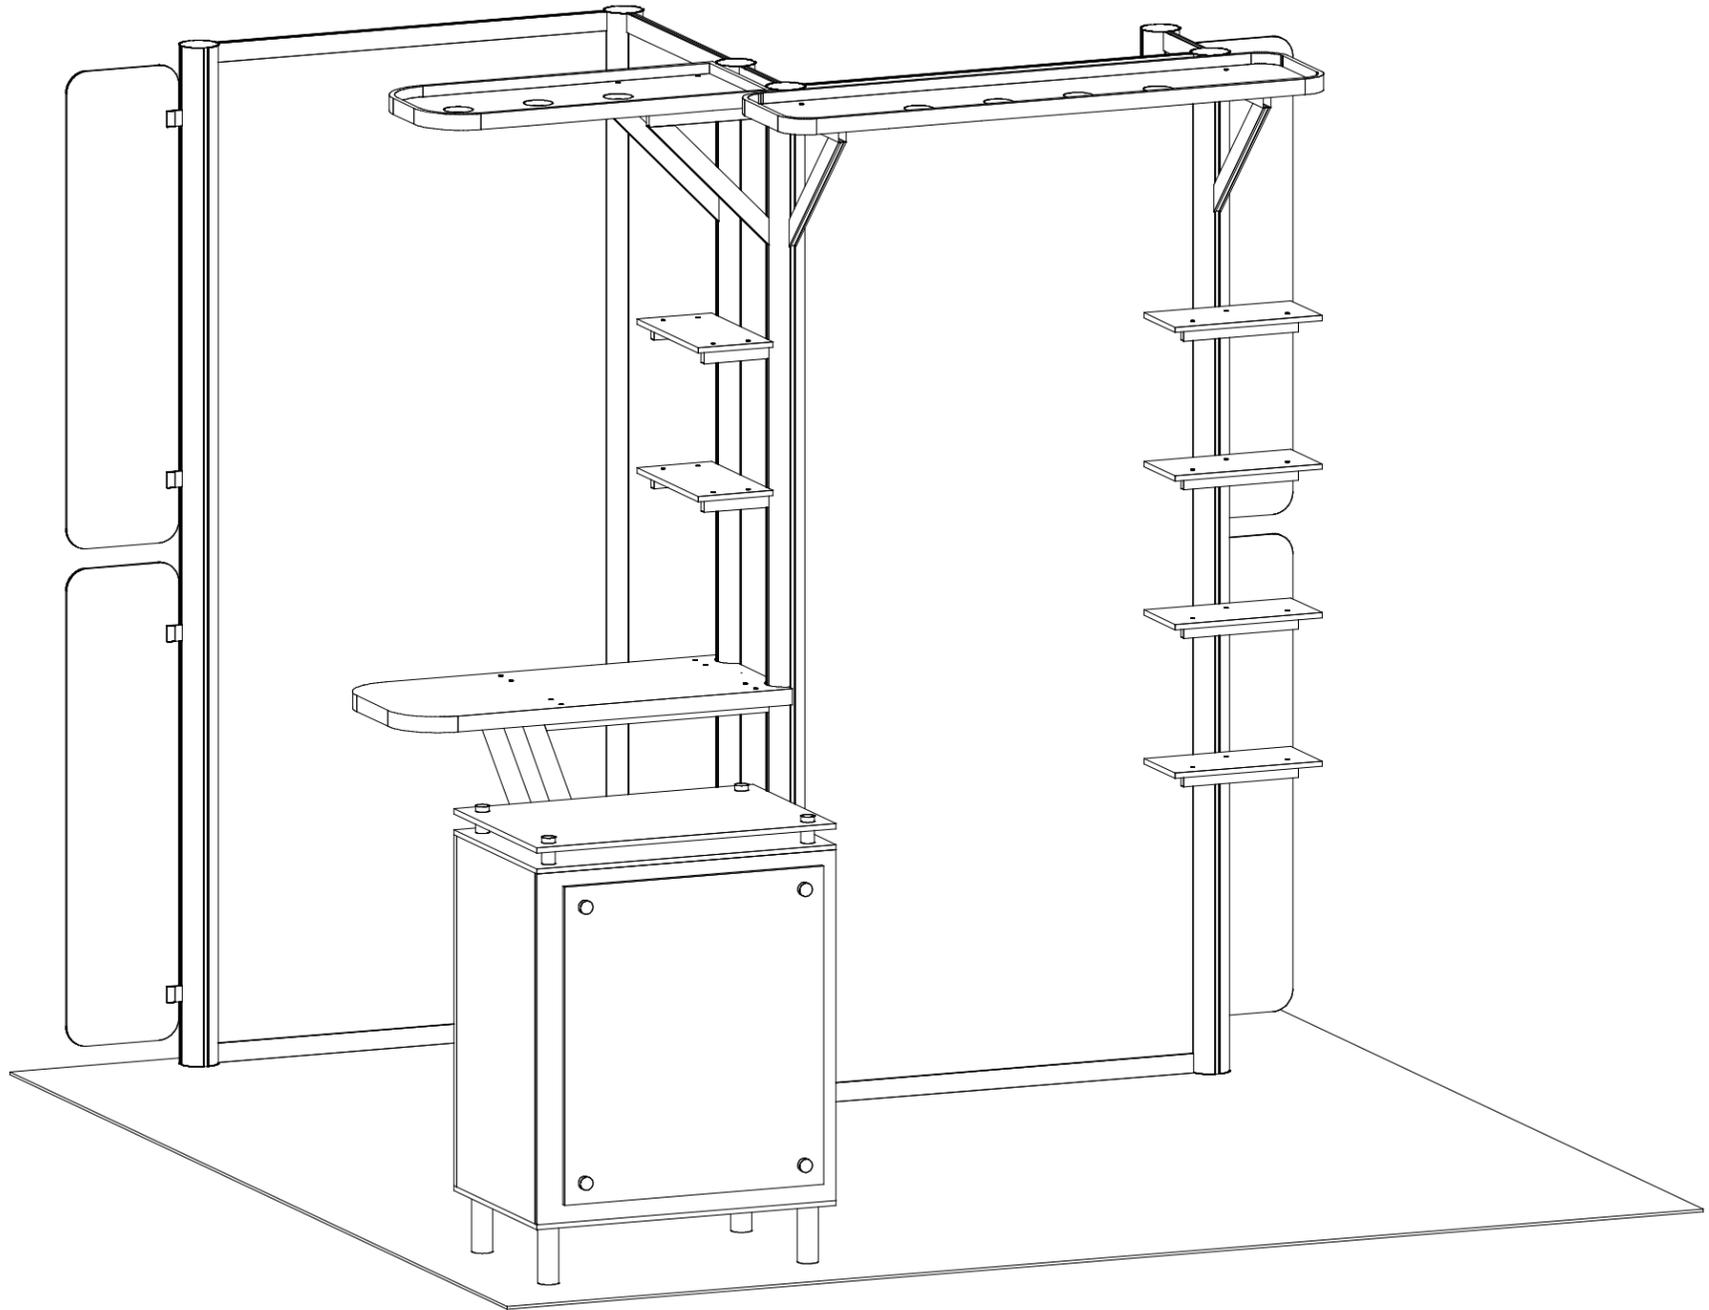

SETUP INSTRUCTIONS

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

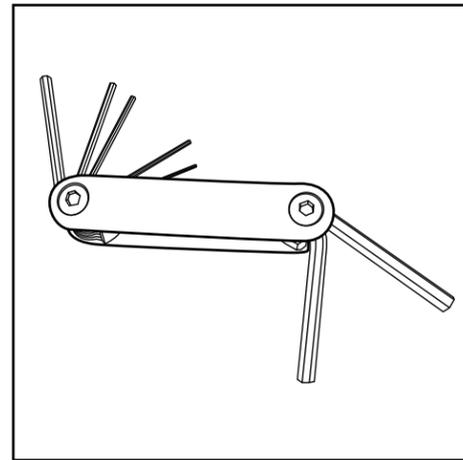


Hex Tool - Essential for Assembly

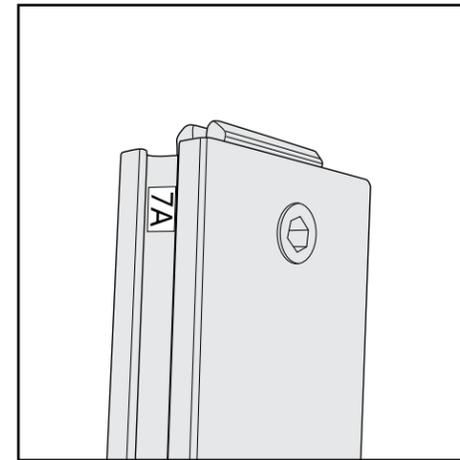


Part Identification - Numbering

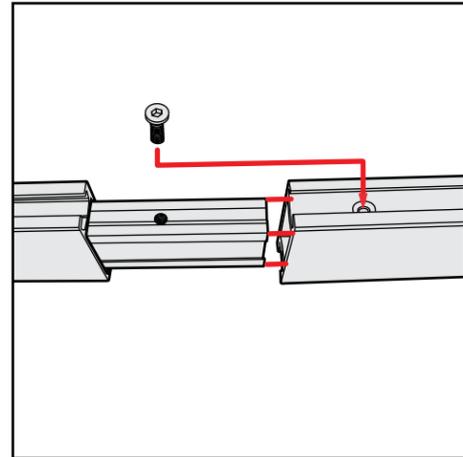


Spline Connection

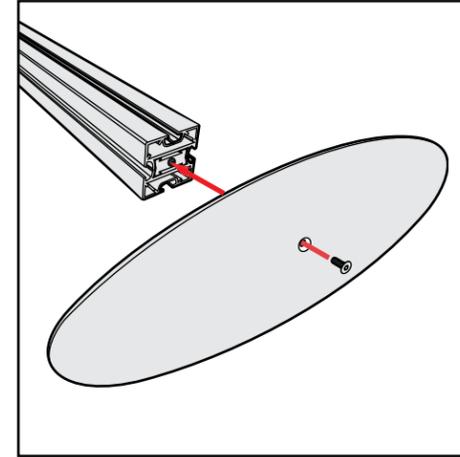

Base Plate & Extrusion Connection

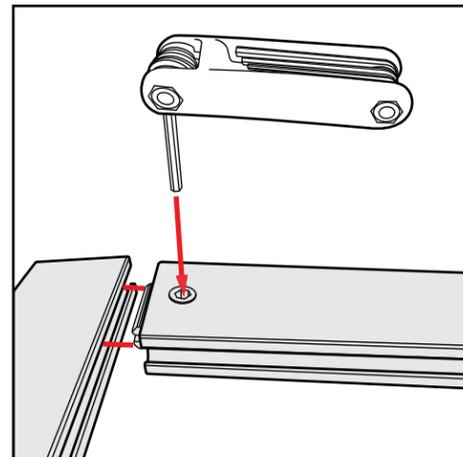

Extrusion & Lock Connection

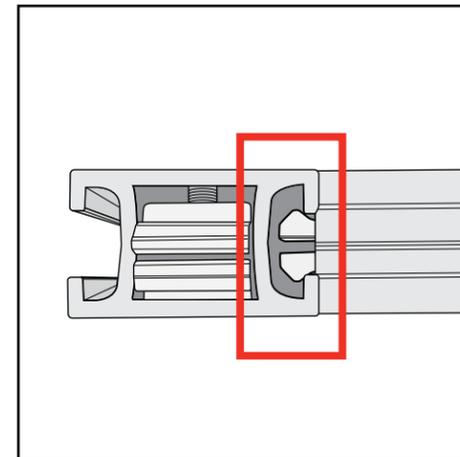

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


CRATE PACKING

Item	Qty.	Description
1	1	96"h RR91 Vertical Extrusion
2A/2B	1/1	39"w Z45 Horizontal Extrusion
3	1	96"h RR91 Vertical Extrusion
4A/4B	1/1	23.5"w Z45 Horizontal Extrusion
5	1	96"h RR91 Vertical Extrusion
6A/6B	1/1	8.5"w Z45 Horizontal Extrusion
7	1	96"h RR91 Vertical Extrusion
8A/8B	1/1	39"w Z45 Horizontal Extrusion
9	1	96"h RR91 Vertical Extrusion
10A/10B	1/1	8.5"w Z45 Horizontal Extrusion
11	1	96"h RR91 Vertical Extrusion

Steps:
1) Assemble horizontals between verticals as shown, inserting **Infills**.

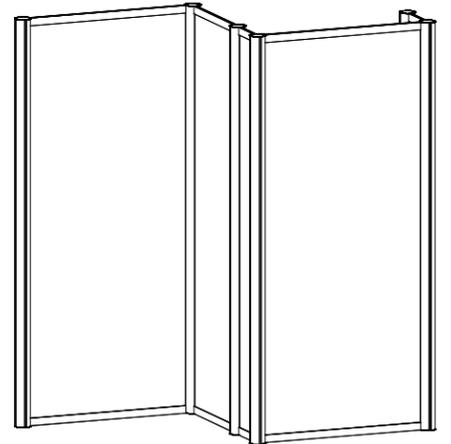


When assembled

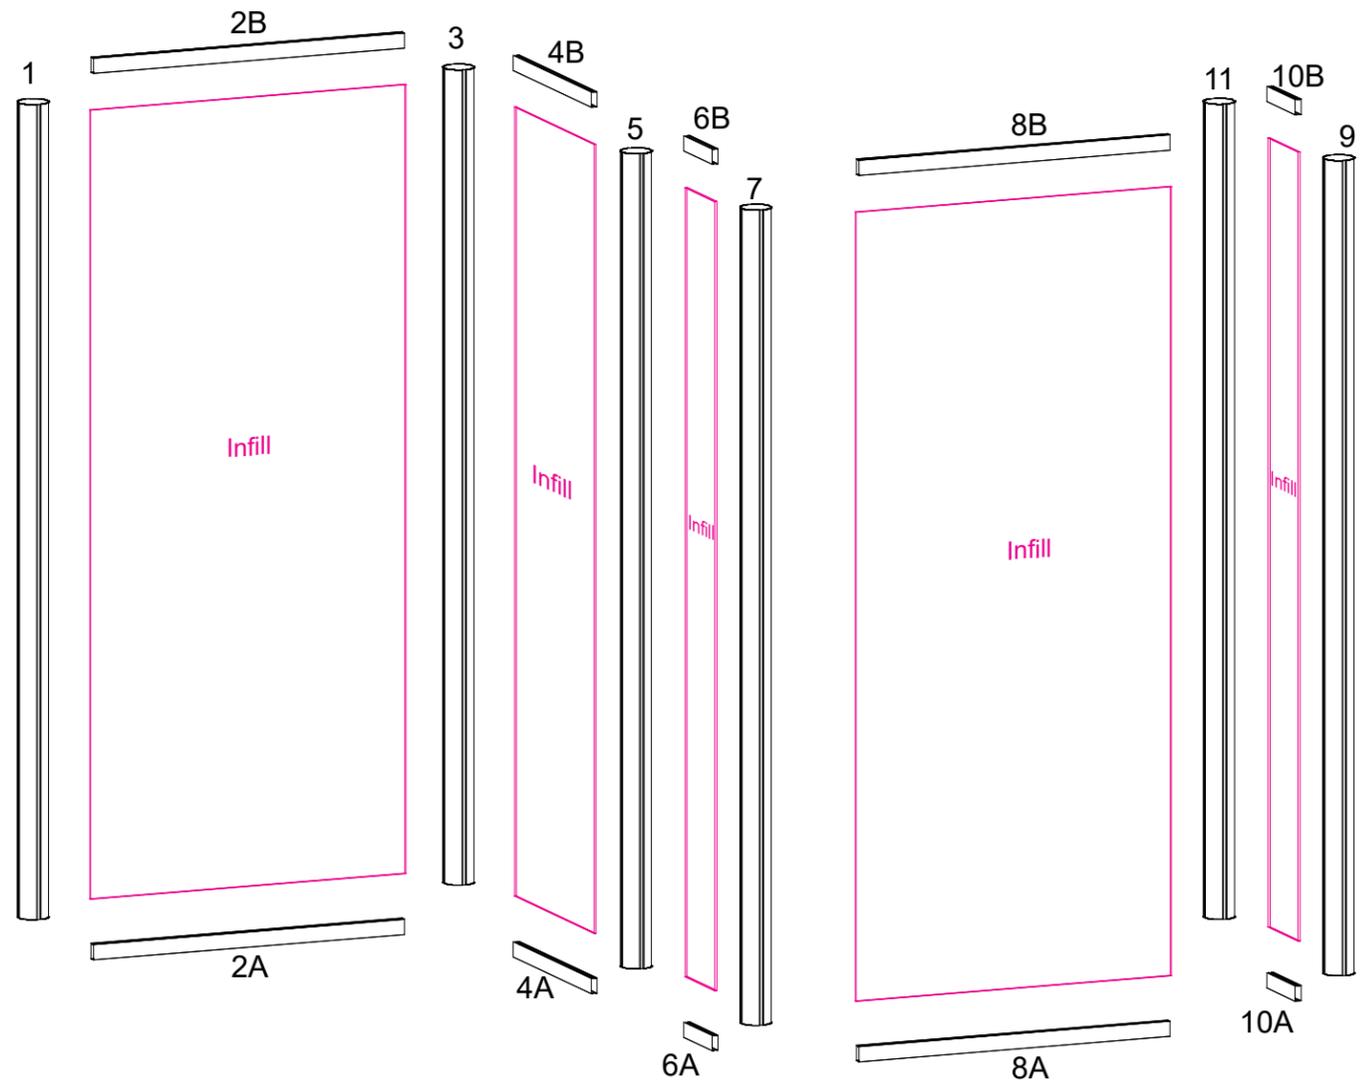

FRONT VIEW

Item	Qty.	Description
13A	1	12"w x 13.26"h Ceiling Support bracket
13B	1	12"w x 13.26"h Ceiling Support bracket
13C	1	12"w x 13.26"h Ceiling Support bracket
13D	1	12"w x 13.26"h Ceiling Support bracket
--	1	34"w x 14.5"d Ceiling panel (Ceiling A)
--	1	54.5"w x 13.5"d Ceiling panel (Ceiling B)
--	4	11.5"w x 45"h Wing


- Steps:
- 1) Attach Wings to verticals [1] & [11] using A10 clamps.
See [Wing Attachment](#) detail.
 - 2) Connect support brackets [13A, 13B] to verticals [5,6]; attach Ceiling A to brackets [13A, 13B] using [Bolt to V4 Connection](#).
 - 3) Attach support brackets [13C, 13D] to verticals [7,9]; attach Ceiling B to brackets [13C, 13D] using [Bolt to V4 Connection](#).
 - 4) Connect power cords to Puck Lights in ceilings A & B.
See [Puck Light Connection](#) detail.

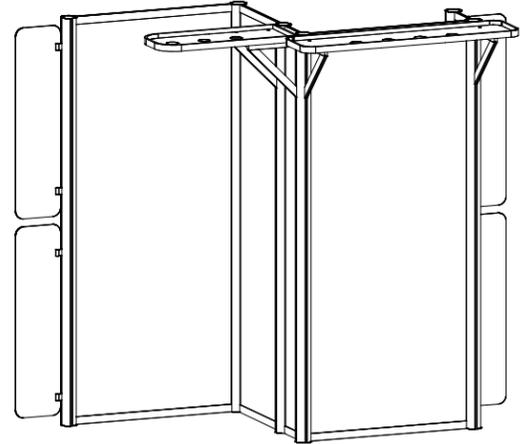

When assembled

*** Wing Attachment**

- 1) Slide A10 connector into groove of extrusion.
- 2) Tighten set screw to secure A10 to extrusion.
- 3) Insert Wing into Clamp.
- 4) Tighten knob to secure wing in place.

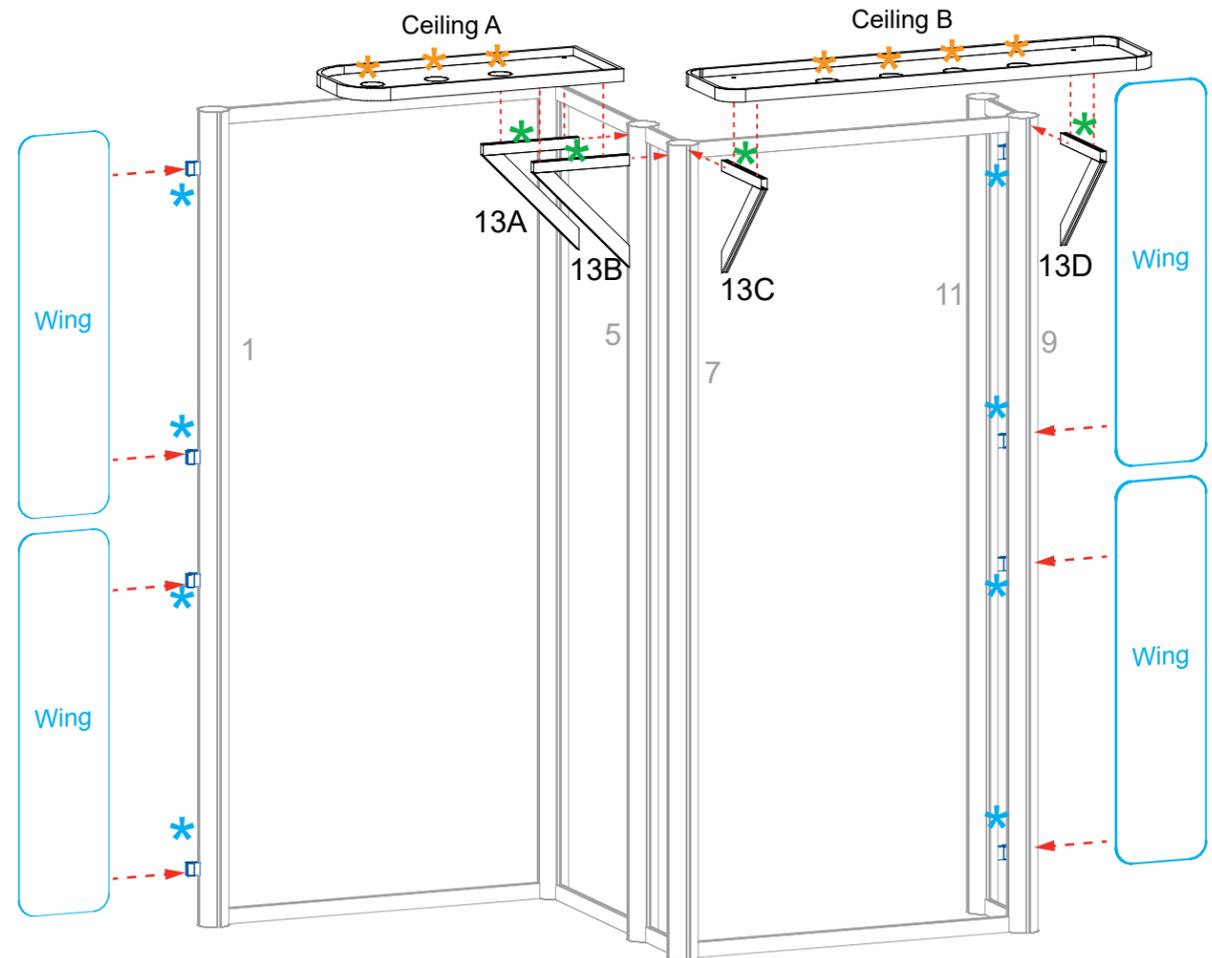

FRONT VIEW

Ceiling Bracket

12" Z33
lock lock
16.97" Z33 lock

Keep bracket assembled

*** Puck Light Connection**

Connect transformer to puck lights, then attach transformer to power source.

To Power Transformer Puck Light

*** Bolt to V4 Connection**


Slide V4 connector into groove of extrusion & secure with set screw.

Attach bolt through panel to V4 connector.


bolt Panel set screw Extrusion V4

Item	Qty.	Description
12A	1	42.077" RSG510 angled Extrusion
12B	1	42.077" RSG510 angled Extrusion
12C	1	23"w Z45 Horizontal Extrusion
12D	1	23"w Z45 Horizontal Extrusion
--	1	13" x 15" Custom Base Plate
--	1	38"w x 17.5"d Workstation Counter Top
--	4	2.5" x 3.251" Mounting Plate

- Steps:
- 1) Attach Base Plate to extrusions [12A,12B] using bolts.
 - 2) Connect horizontals [12C,12D] between extrusions [12A,12B] and backwall verticals [5,7].
 - 3) Attach Counter Top to horizontals [12C/12D] using mounting plates, as shown in detail.

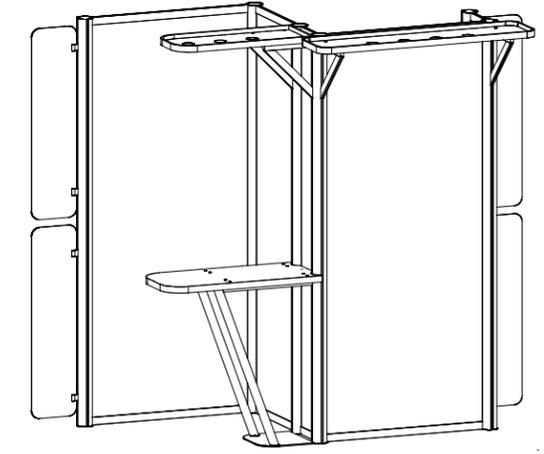


When assembled

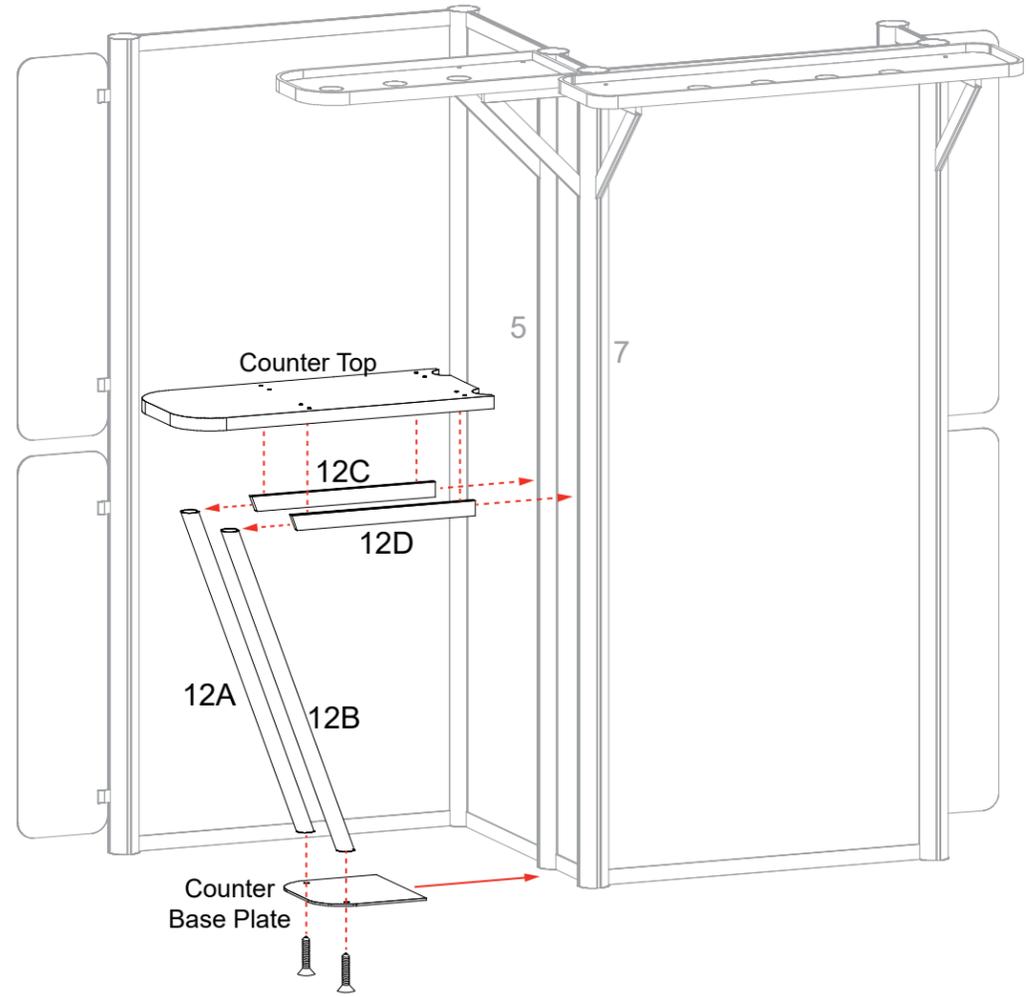


FRONT VIEW


Counter Top Attachment

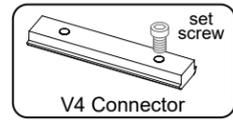

- 1) Slide V4 connector into groove of horizontal extrusion; attach mounting plate to V4 with bolts, securing connector in place.

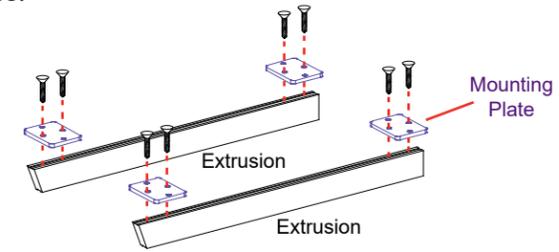


- 2) From underside of counter top, attach bolts through mounting plate to T-nuts on counter.

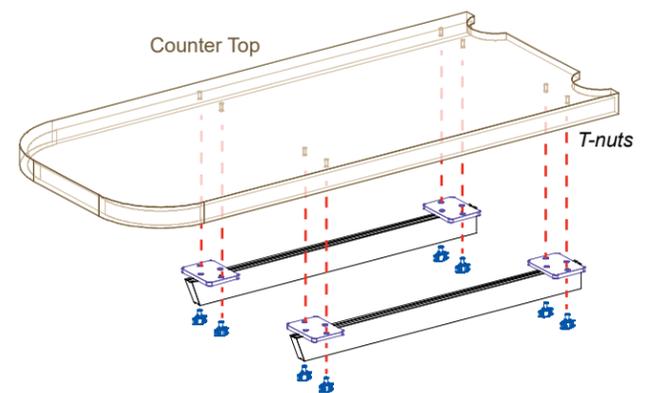


Item	Qty.	Description
--	2	14.75" x 7.5" Shelf w/ Z31 (Shelf A)
--	4	14.75" x 7.5" Shelf w/ (2) Z31 (Shelf B)


Steps:
1) Attach Shelves A to backwall verticals [5,7]; connect shelves [B] to backwall vertical [9]. See **Shelf Attachment** detail.

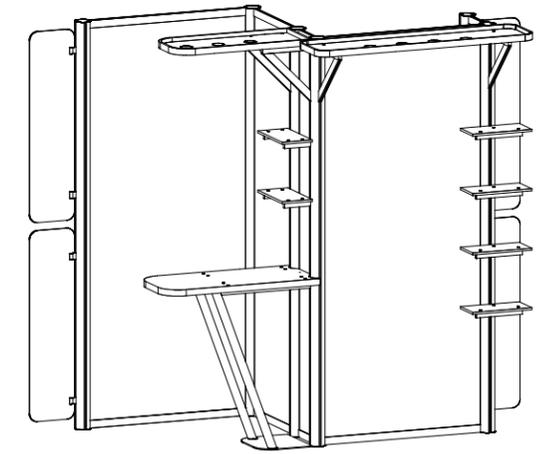

Completed Assembly



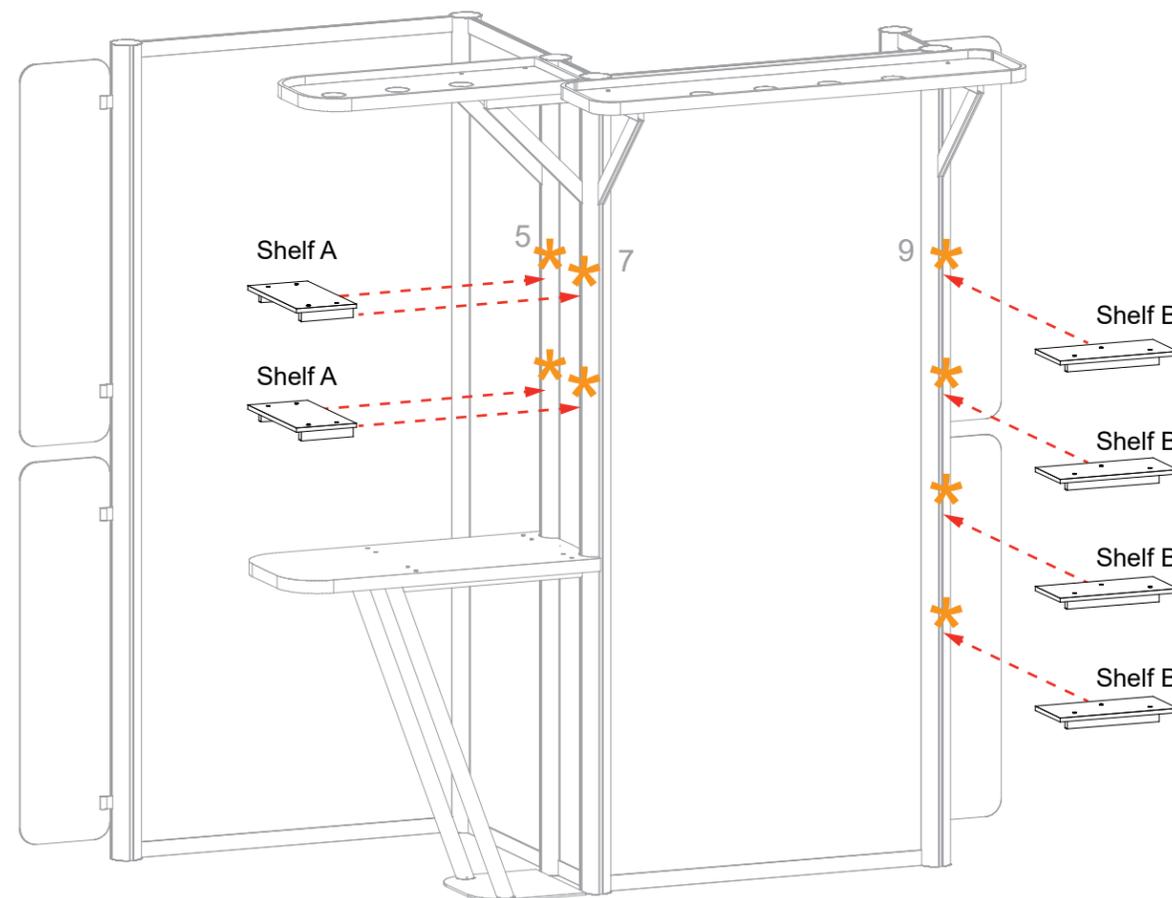


FRONT VIEW

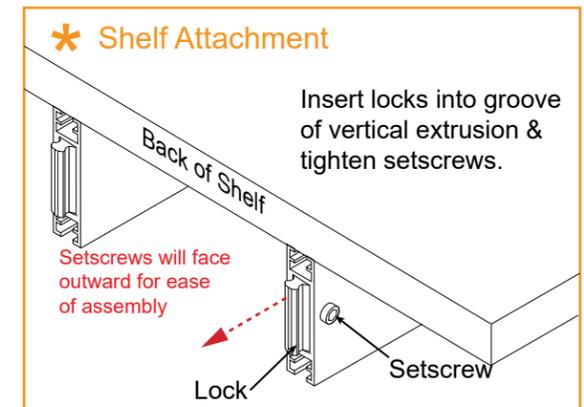


Item	Qty.	Description
--	4	5.5"h RSG500 Counter Leg
--	1	30"w x 20"d x 34"h Counter Base
--	1	30"w x 20"d Counter Top


- Steps:
- 1) Attach Counter Legs to bottom of counter base, using bolts from inside counter.
 - 2) Attach Counter Top to base using standoff barrels. See [Counter Top Attachment](#) detail.
 - 3) Connect Graphic to front of base using standoff barrels. See [Graphic Attachment](#) detail.

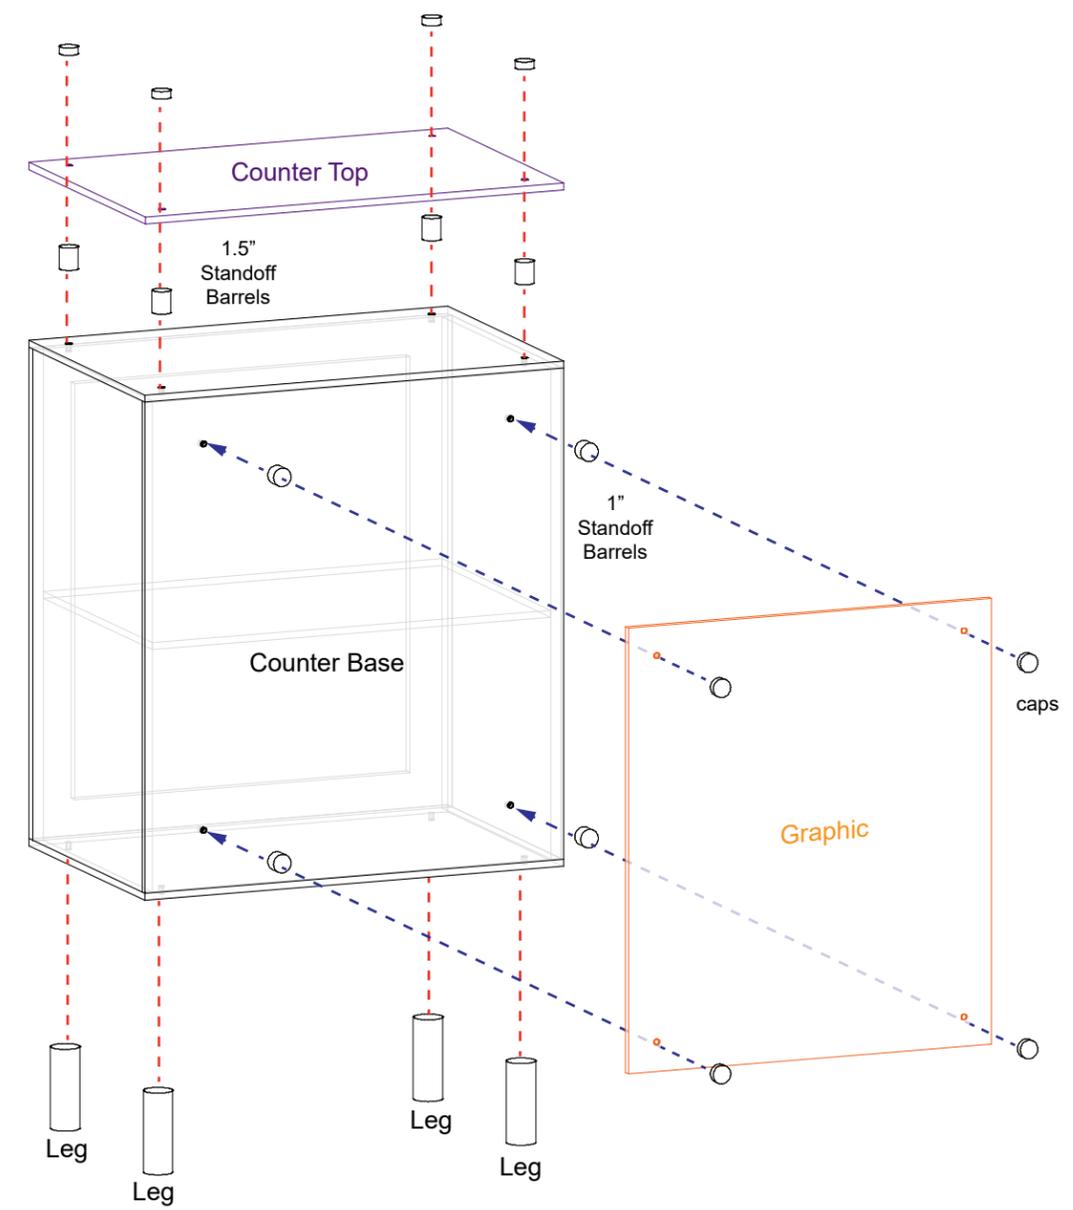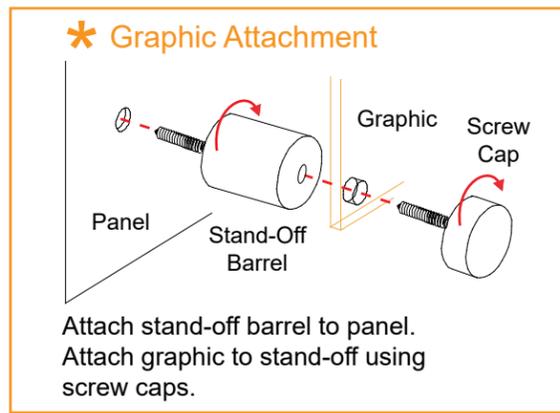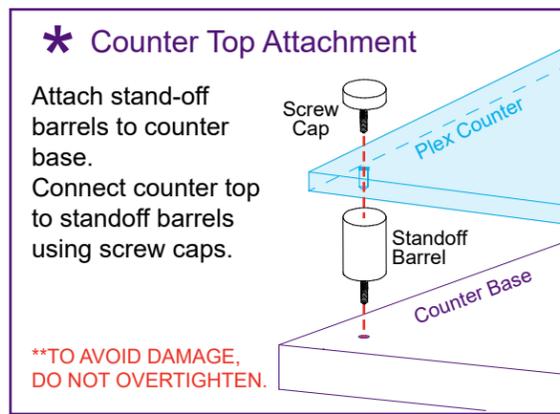

FRONT VIEW

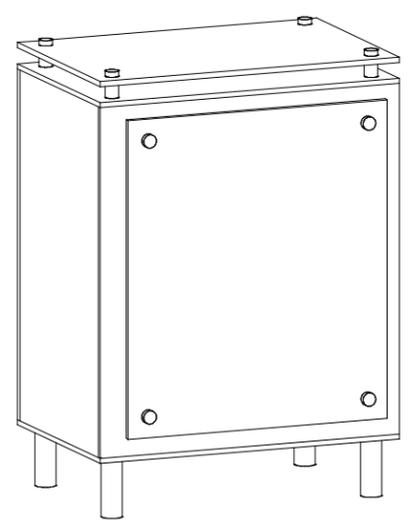

When assembled

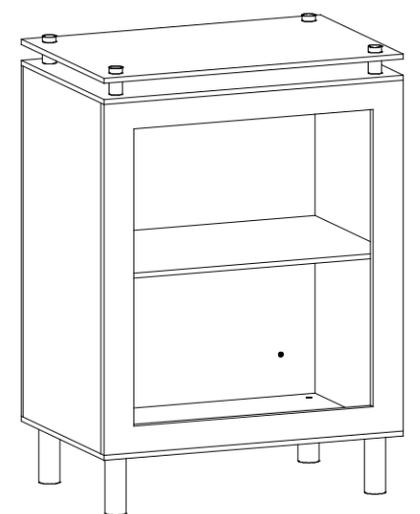

BACK VIEW