

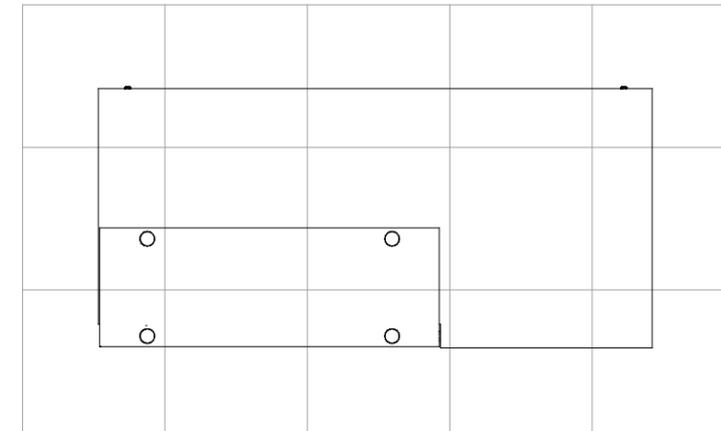


Order #XXXXX - ECO-35C Sustainable Counter / Podium

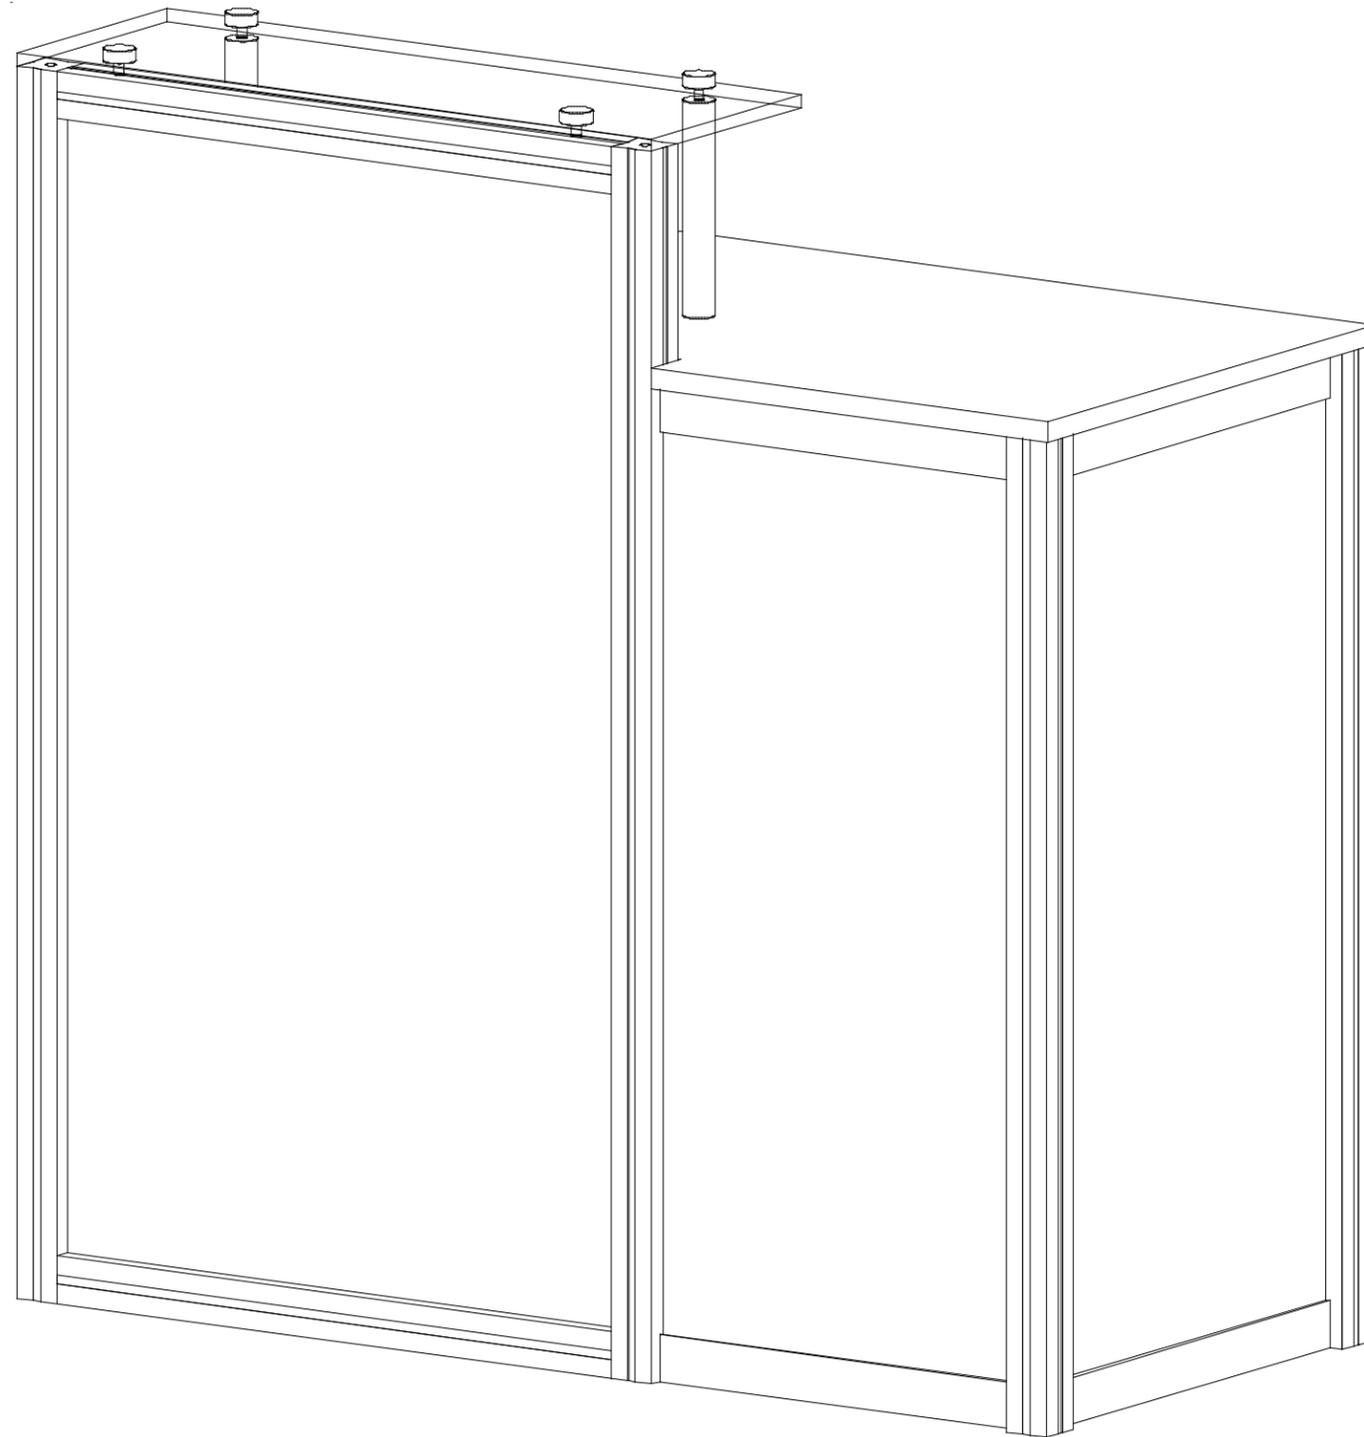

Plan View

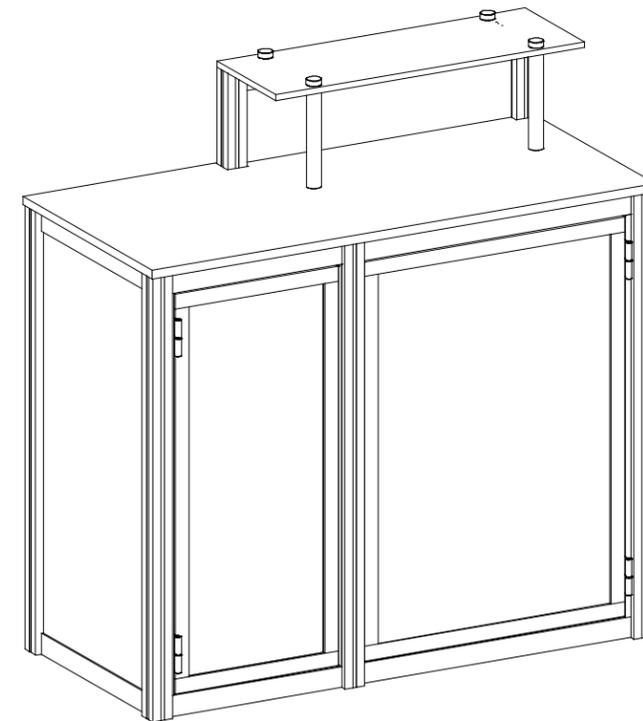

General Setup Instructions


- The setup instructions are created specifically for your configuration.
- Setup instructions are laid out sequentially in levels, including exploded views and a logical series of steps for assembly. We encourage you to study the instructions before attempting to assemble your exhibit.

Cleaning and Packing


- Use non-abrasive cleaners when cleaning extrusions or ECO Glass inserts.
- Use mild cleaners and soft materials such as cotton to clean all laminates.
- Keep exhibit components away from extreme heat and long exposure to sun light. This will prevent warping and fading.
- Retain all packing material for ease of re-packing. This protects the exhibit components and keeps each part organized.

Disassembling


- When disassembling exhibit, tighten all setscrews to prevent loss of hardware in the shipping process.

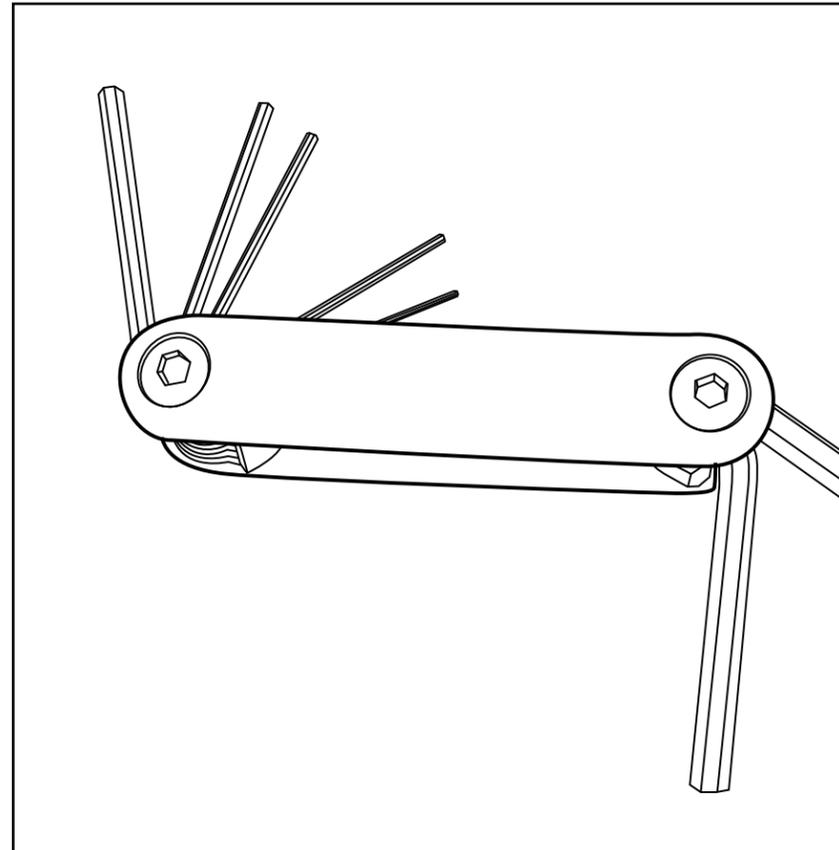


Hex Tool for Assembling Exhibit

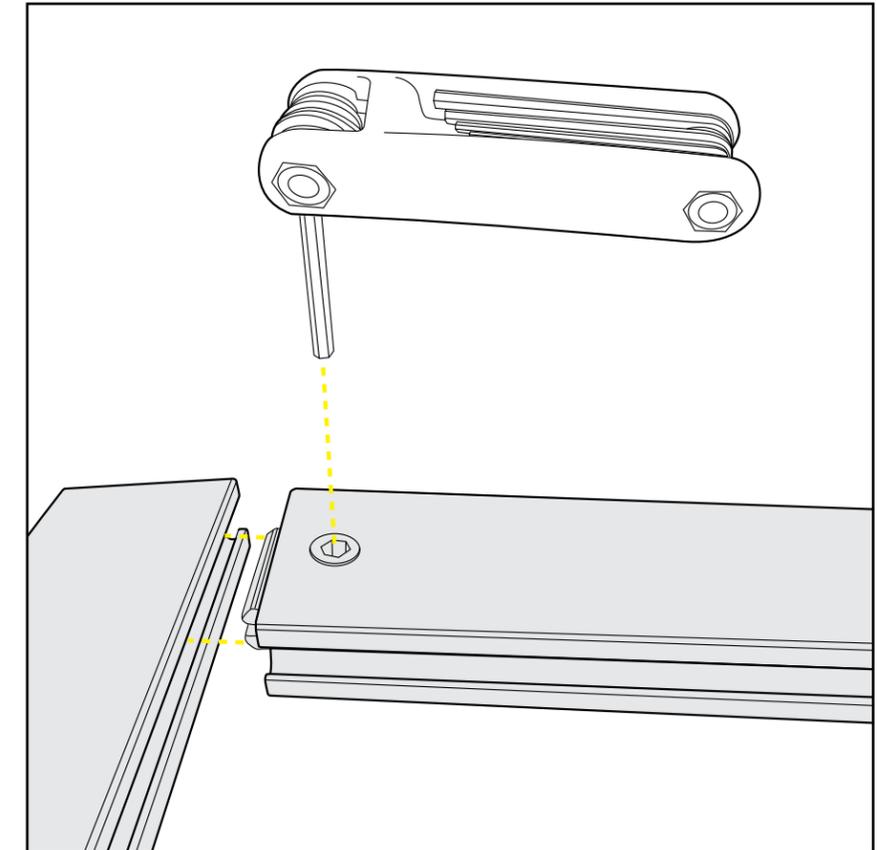


Extrusion Lock Connectors

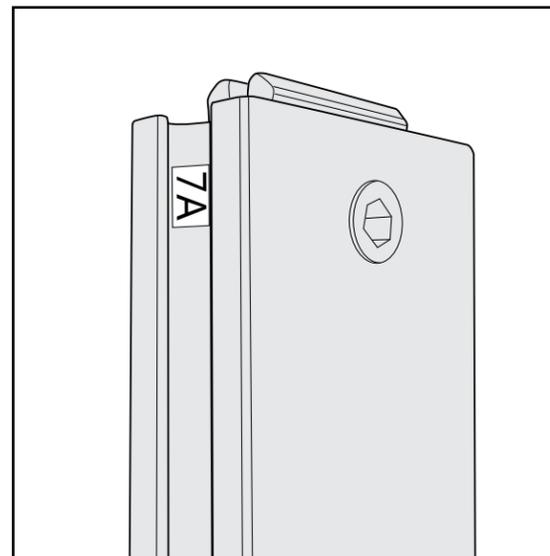

Numbering Instructions for Setups/Packing

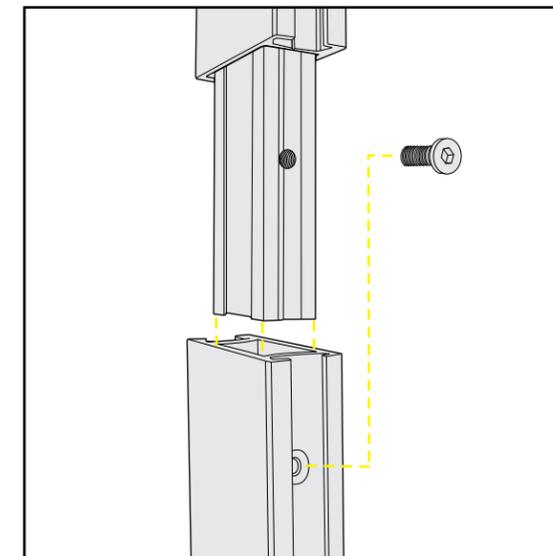

Inline Connection between Extrusions

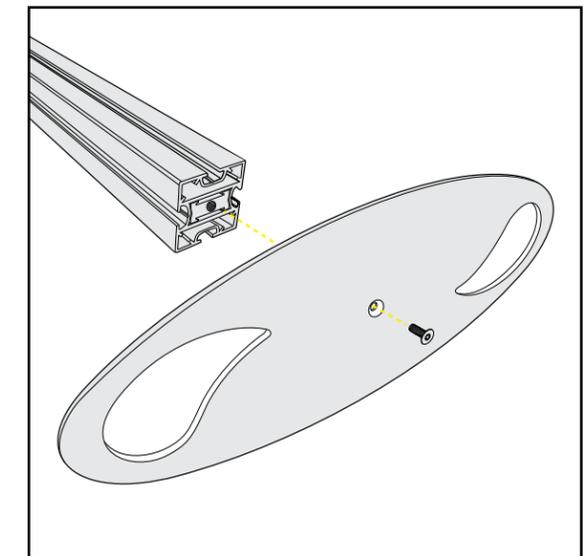

Baseplate Connection for Vertical Extrusions




Item	Qty.	Description
1	1	38" h S44 Vertical Extrusion
2	1	38" h S44 Vertical Extrusion
3	1	38" h S44 Vertical Extrusion
4/4A	1/1	47" h S44 Vertical Extrusion
5	1	38" h S44 Vertical Extrusion
6/6A/6B	3/2/1	18" w Z45 Horizontal Extrusion
7/7A	2/2	16" w Z45 Horizontal Extrusion
8	1	Bottom Shelf
9/9A	1/1	25" w Z45 Horizontal Extrusion
10/10A	1/1	25" w S44 Horizontal Extrusion

Steps:



- 1) Connect horizontals [6] between verticals [1 & 2], [3 & 4], & [4A & 5].
- 2) Attach horizontals [7] between assemblies [1/2/6] & [3/4/6].
NOTE: Vertical [2] has hinges and must face inward. Refer to detail below.
- 3) Connect horizontal [9] between verticals [3 & 5].
NOTE: Vertical [5] has hinges and must face inward. Refer to detail below.
- 4) Connect horizontal [10] between verticals [4 & 4A].
- 5) Insert side infill between [1 & 2], [3 & 4], [4A & 5]
- 6) Insert large front infill between [4 & 4A] & small front infill between [1 & 4].
- 7) Secure infills with horizontals [6A], [6B], [7A], & [10A].
- 8) Attach horizontal [7A] between verticals [2 & 3]
- 9) Attach horizontal [9A] between verticals [3 & 5].

Steps Cont'd:

- 10) Insert Shelves and rest on pin on interior of kiosk.
- 11) Connect shelf supports to velcro on interior of kiosk; place large interior shelf on supports.
- 12) Hang cabinet doors on hinges.
See **Door Attachment** detail.

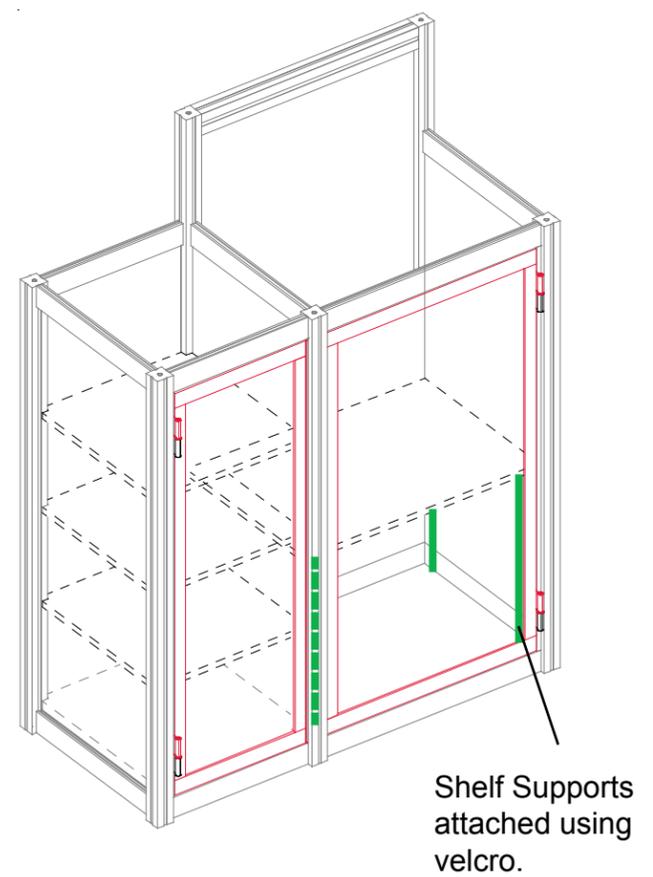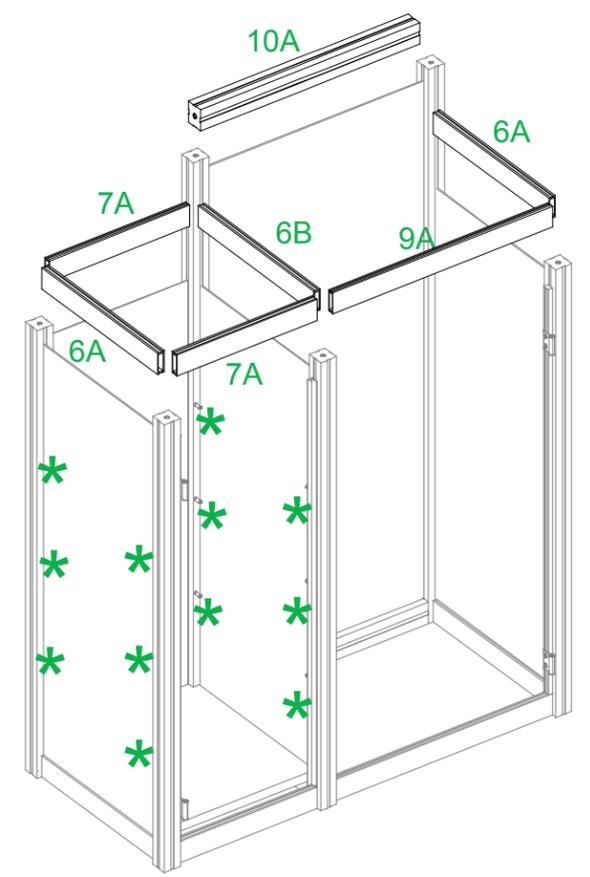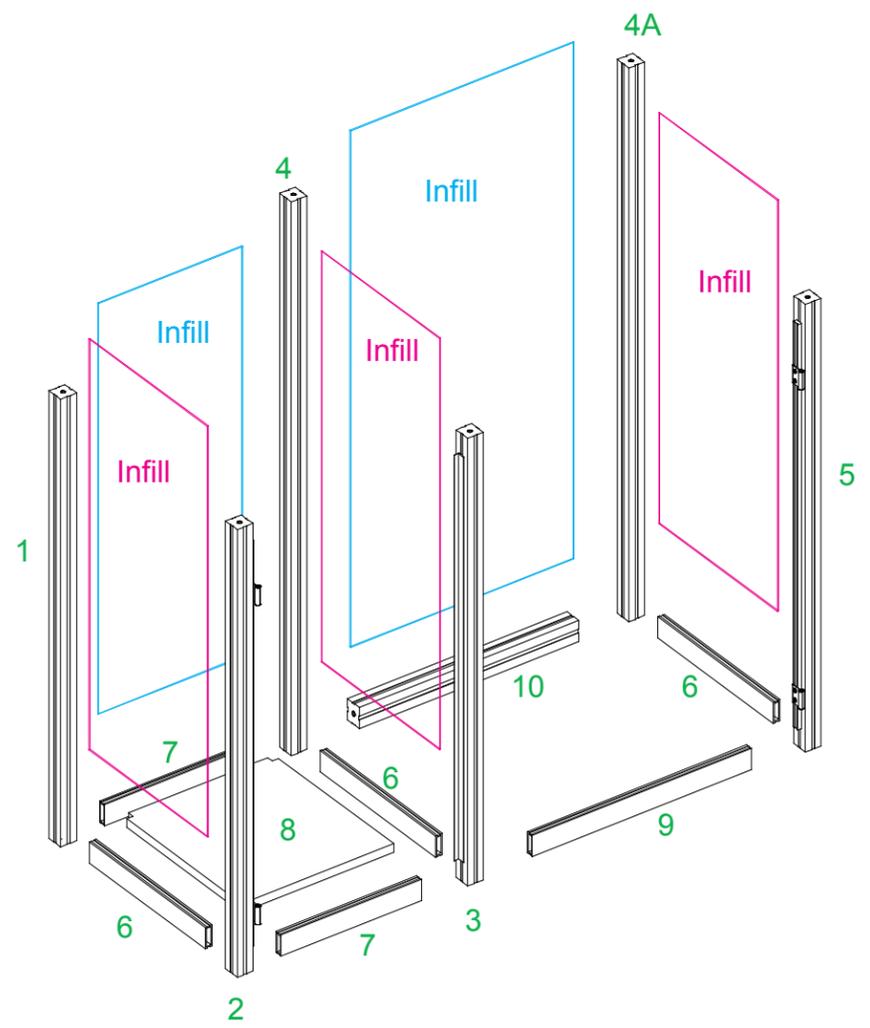


Item	Qty.	Description
11	1	Counter Top
12	2	8.25" h Stand-Off Barrel

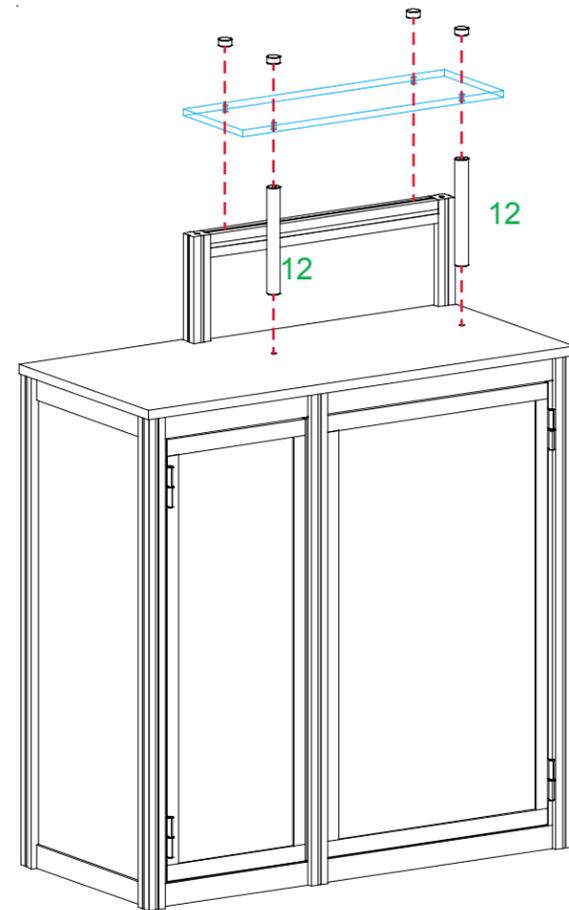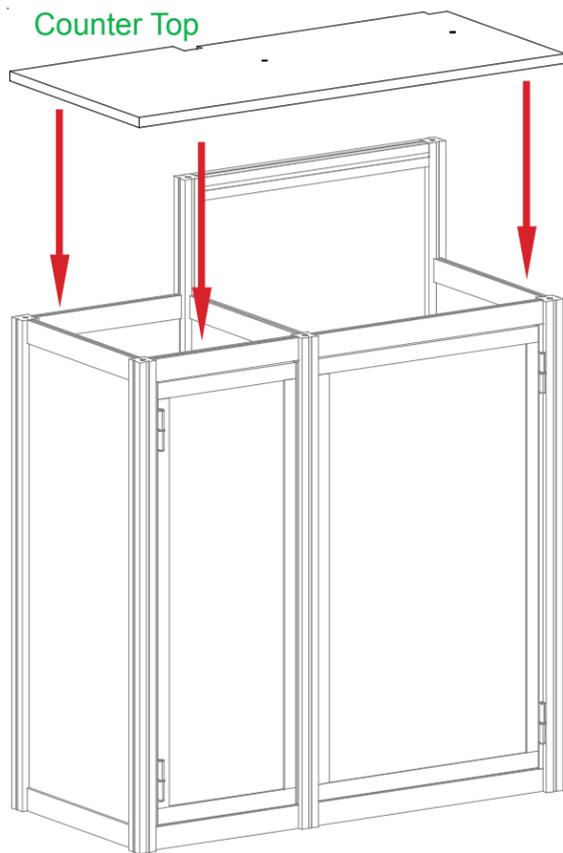

Steps:

- 1) Attach Counter Top to assembled base. See **Counter Top Attachment** detail.
- 2) Attach stand-off barrels to threaded holes in the counter top.
- 3) Connect Plex Counter to stand-offs and [10A] using screw caps. See **Upper Shelf to Counter Attachment** detail.

Upper Shelf to Counter Attachment

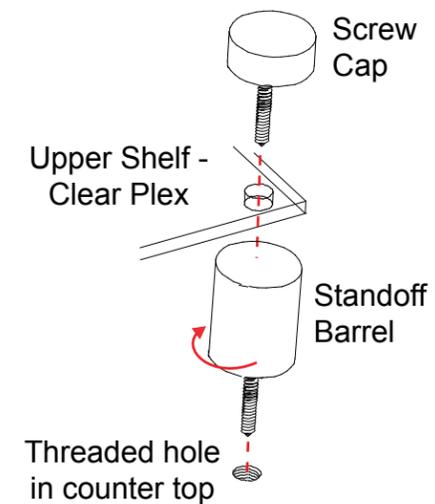

Attach standoff barrels to counter and secure in place. Secure upper shelf to standoffs using screw caps.

