

**WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING**





Part Number	Qty for Step	Description
1	2	38" h Vertical extrusion
2	1	38" h Vertical extrusion w/ door hardware
3	1	38" h Vertical extrusion w/ door hardware
4	4	48" h Vertical extrusion
4a	8	Horizontal Counter Supports
5	4	16" Horizontal extrusion
6	4	12.4563" Curved Horizontal extrusion
7	2	19.573" Horizontal extrusion
8	6	20" Curved Horizontal extrusion
9/9A	2/1	20" Horizontal extrusion / 20" Horizontal extrusion w/counter connection

**Steps**

- 1) Connect lower horizontal extrusions [5 - 9] between vertical extrusions [1 - 4] as shown below.
- 2) Place inserts and door as indicated connecting upper horizontal extrusions [5 - 9A] as shown.
- 3) Attach shelf supports to velcro located inside pedestal, place internal shelf atop shelf supports.
- 4) Place counters atop assembled pedestal.

Slide Door into Place atop Hinge as shown.

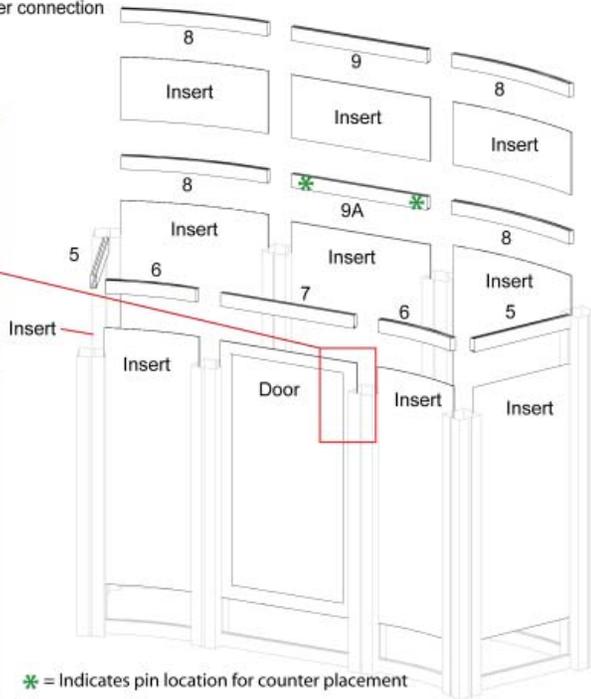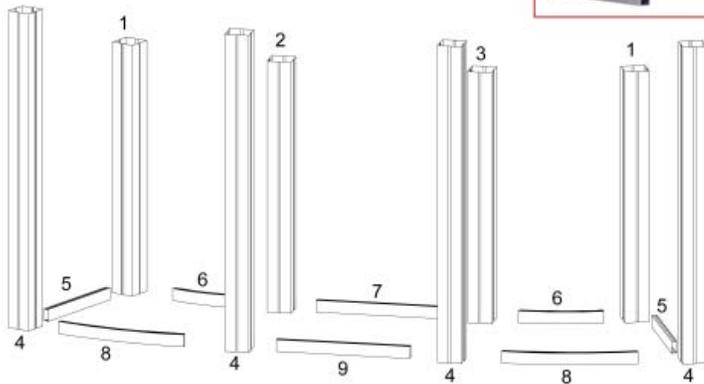

\* = Indicates pin location for counter placement

